


Assembly Instructions For F2318/8, F2319/6+3, F2320/5 (E) 10/07

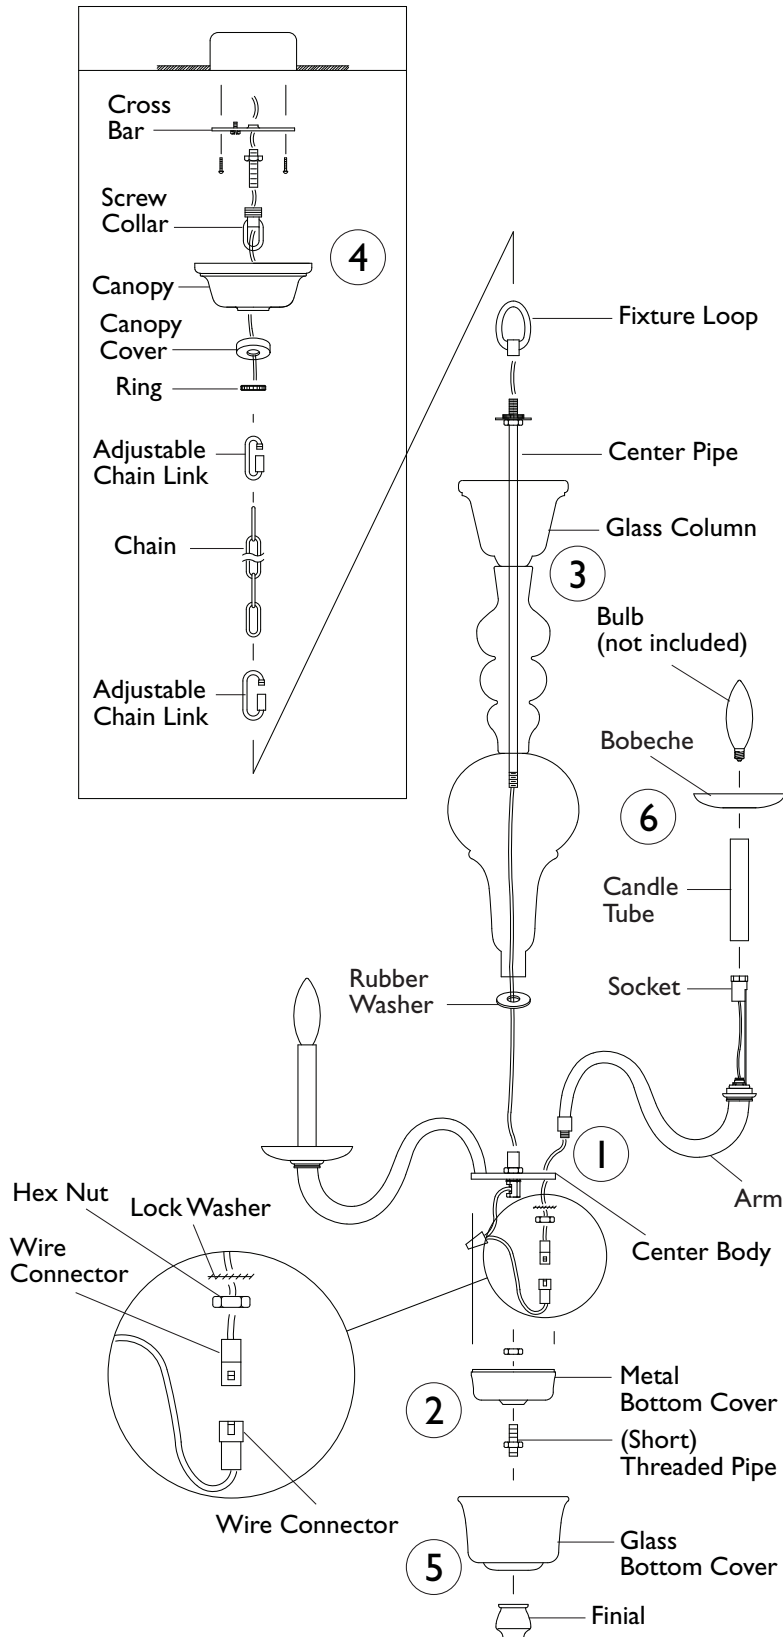

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

1. Install arms:
 - A. Slip wire and wire connector from arm through a hole in center body. Then install arm by fastening with lock washer and hex nut from below.
 - B. Connect the wire connector from arm into a wire connector from center body. **IMPORTANT:** Make certain wire connectors are securely lock in together.
 - C. Repeat other arms.
2. Install metal bottom cover:
 - A. Install a hex nut onto one end of (short) threaded pipe leaving about 1/2" (13 mm) of thread exposed.
 - B. Insert the other end of the pipe through hole at metal bottom cover, and lock in position by fastening with another hex nut from above.
 - C. Install the metal cover by screwing its threaded pipe into coupling which is located at bottom of center body. **IMPORTANT:** Make certain to carefully clear wires out of its path before screwing the pipe.
3. Install column:
 - A. Slip rubber washer through fixture wires. Then let it sit on top of center body.
 - B. While carefully holding onto glass column, slip fixture wires through it. Then carefully lower the glass column and let it sit on top of center body.
 - C. While one person is holding the glass column in position, have another person slip center pipe and lock the glass column by screwing into coupling located at top of center body. **IMPORTANT:** Do not over tighten.
 - D. Slip fixture loop through fixture wires. Then install by screwing onto top end of center pipe.
4. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
5. Install glass bottom cover:
 - A. Slip glass bottom cover onto bottom of fixture and lock in position by fastening finial. **IMPORTANT:** Do not over tighten.
6.
 - A. Slip candle tube over sockets.
 - B. Install bobèche by slipping through candle tube.
 - C. Install bulb (type-B candelabra base of 60 Watt maximum / not included) by screwing into socket.

