


Assembly Instructions For

MR1088 (E) 3/08

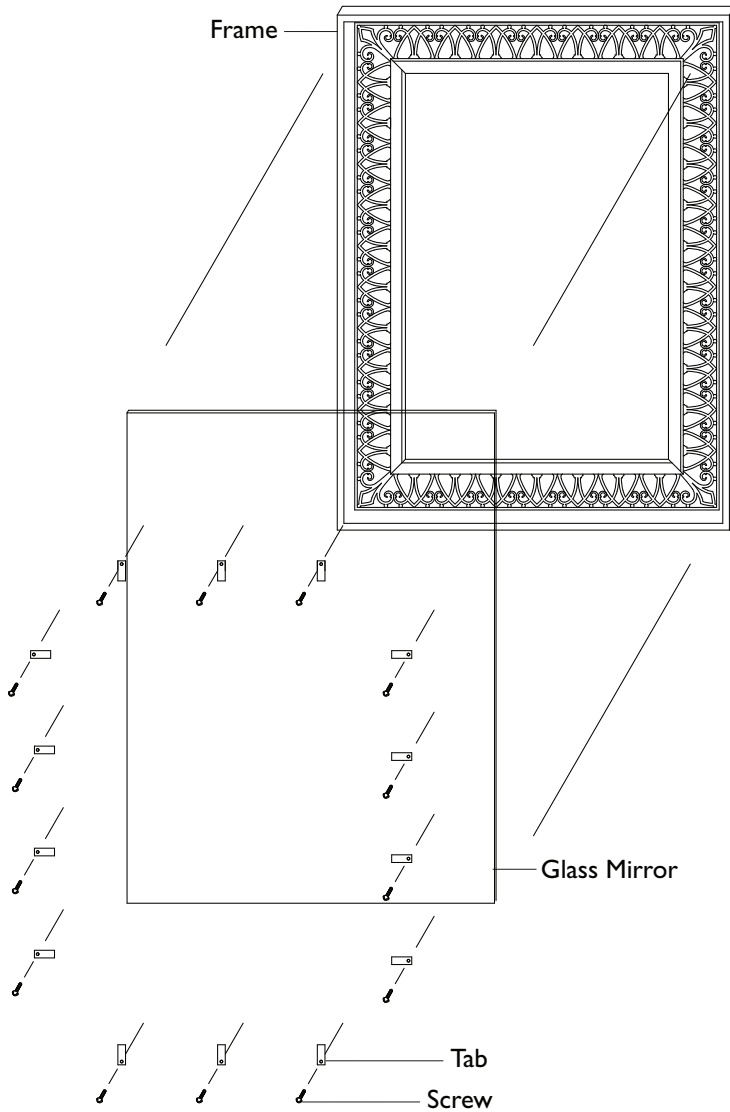


Carefully unpack and identify all parts before assembly.

1. Lay frame, with holes side facing up, on a non-abrasive and elevated surface.
2. Lay mirror face down on top of frame. Make certain glass mirror is centered within frame.
3. Secure mirror to frame with screws as shown in drawing.
4. At desired wall location, install two picture frame hangers or screws (not included) into wall at corresponding position with hanging loops on back of mirror frame.

NOTE: Use a level to insure mounting position is horizontal. Check certain the picture hangers or screws are securely fastened onto wall to adequately support the weight of the mirror. If not certain, consult a qualified technician.

5. Carefully hang mirror frame onto wall.

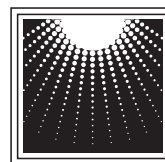

MURRAY
F E I S S

Generation Brands™