


Assembly Instructions For

P1138 (E) 3/08

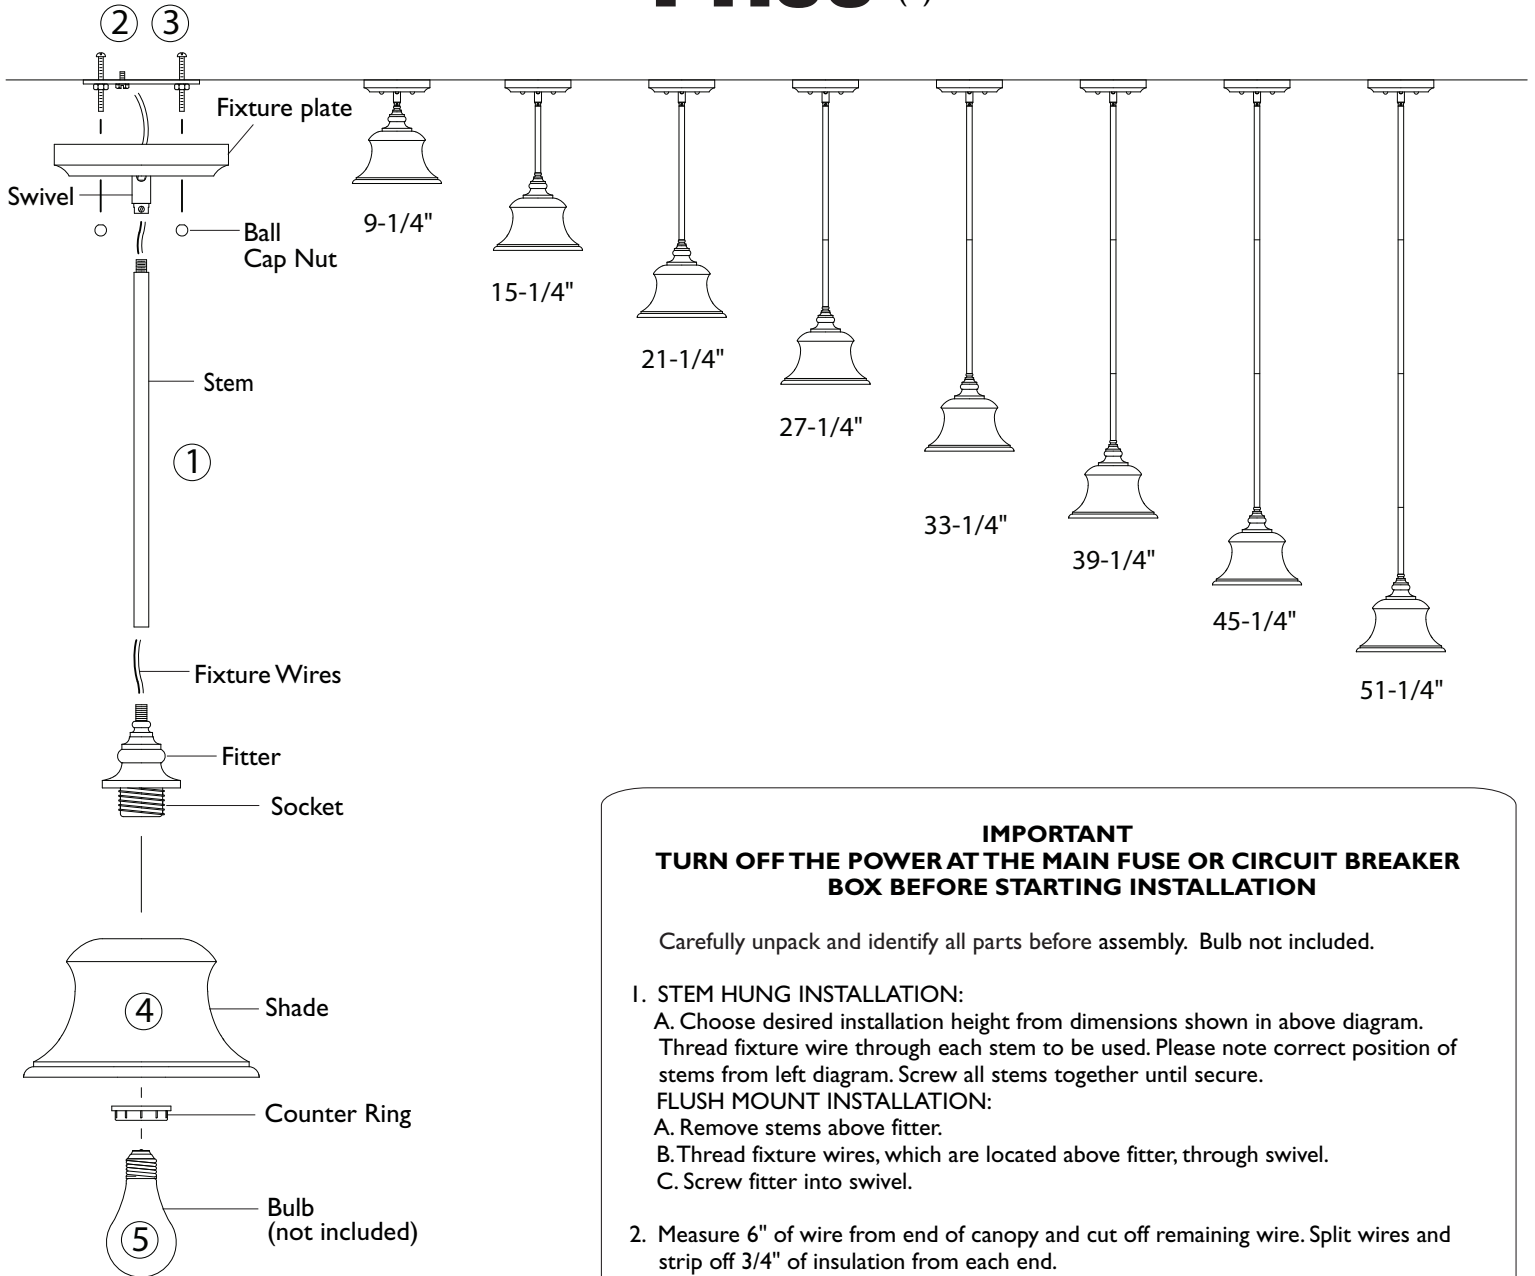

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.


I. STEM HUNG INSTALLATION:

A. Choose desired installation height from dimensions shown in above diagram. Thread fixture wire through each stem to be used. Please note correct position of stems from left diagram. Screw all stems together until secure.

FLUSH MOUNT INSTALLATION:

A. Remove stems above fitter.
 B. Thread fixture wires, which are located above fitter, through swivel.
 C. Screw fitter into swivel.

2. Measure 6" of wire from end of canopy and cut off remaining wire. Split wires and strip off 3/4" of insulation from each end.
3. Follow enclosed "Multiple Standard Installation Instructions" for electrical and fixture installation onto wall outlet box.
4. Install glass shade onto fitter by locking with counter ring.
5. Install light bulb (not included). See relamping label at socket area for type and maximum allowed wattage.

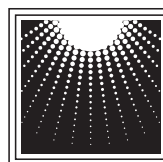

**MURRAY
FEISS**

Generation Brands™