


Assembly Instructions For

WB1389 (E) 3/08

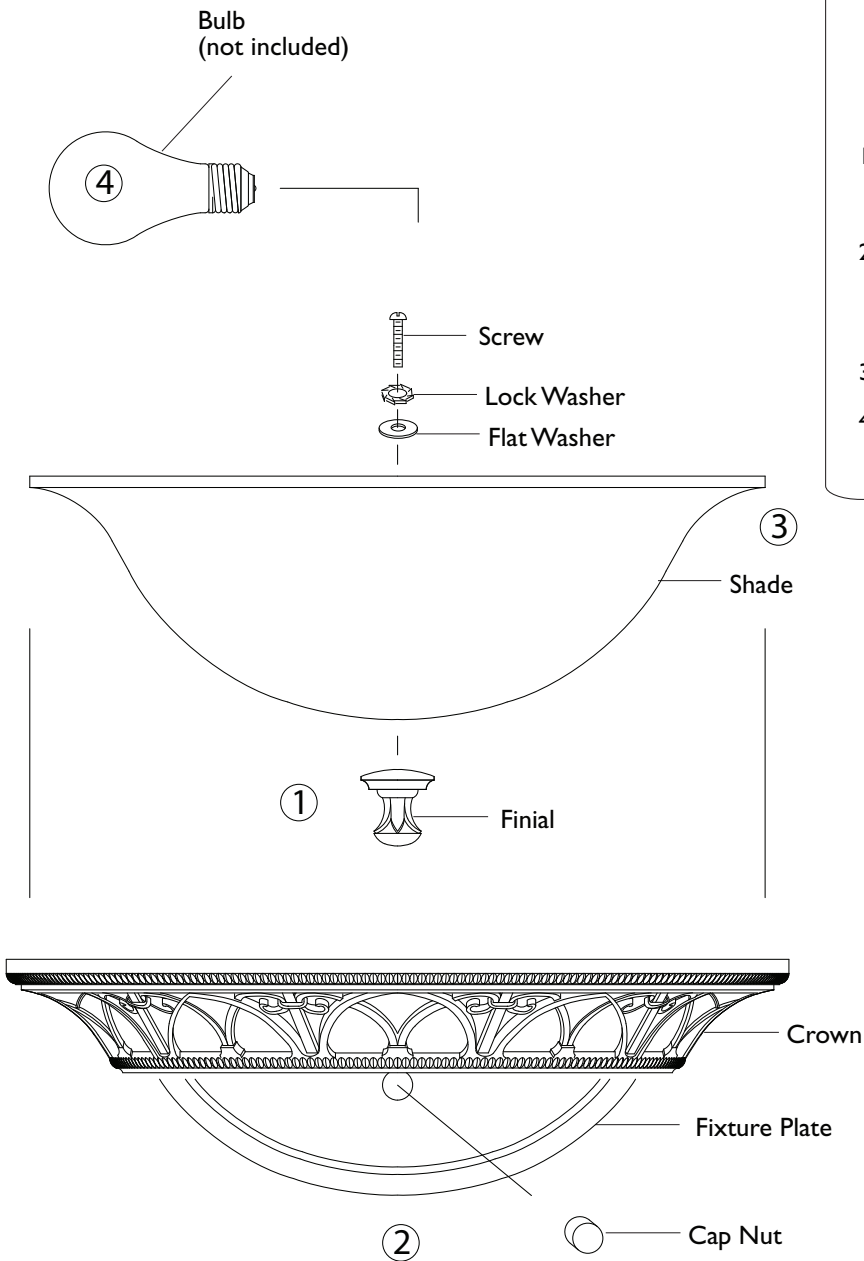

IMPORTANT


TURN OFF THE POWER AT THE MAIN FUSE OR

CIRCUIT BREAKER BOX

BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

1. Install finial onto bottom of shade by fastening with a flat washer, lock washer, and screw. **IMPORTANT: DO NOT OVER TIGHTEN.**
2. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.
3. Slip shade inside of crown until it sits securely.
4. Install light bulb (not included). See relamping label at socket area for type and maximum allowed wattage.

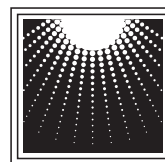

MURRAY
F E I S S

Generation Brands™